

PART #	DESCRIPTION
3670	ROLLER SEALER ASSY 59319
4517	CARD ASSY - STA CONT
5412	GUIDE REAR INSERT
13506	CABLE
14213	CONTACT SPRING
17914	VALVE SOLENOID 24 VDC
20571	SWITCH ASSY
21370	327 BULB WEDGE BASE 28V CAROUSEL
21370	PUSHER FINGER GREEN 0021370
28540	KIT - GRIPPER ARM W/ BRNG
29910	FILTER - DUST
50787	CARD ASSY - MACH CONTROL
53025	ROLLER ASSY - CAM FOLLOWER
53034	DISC ASSY - GATING
53049	BLOCK ASSY - BEARING
53207	HANDLE ASSY - TABLE ASSEMBLY
53403	ROTOR ASSY VALVE
53407	SPROCKET DRIVE SHAFT
53609	DETECTION ARM
53631	BRACKET ASSY - SEP BRNG
53667	COIL DET SPRING
53832	PANEL SWITCH ASSY
53867	SAFETY SWITCH
53982	CARD ASSY - STA CONT
53983	CARD ASSY - LEFT HAND
53984	ASSY - PWB, OPTICAL
54201	JAW ASSY
54202	CHAIN ASSY - ENV GRIP
54215	CHAIN ASSY
54237	SPROCKET ASSY
54624	ENV. SUCKER
54663	FLAP OPENER
54664	TUBE - SHAFT
54683	CABLE ASSY. 39-11/16
55105	KNOB - ADJUST
55109	KNOB ASSY
55205	KICKER ASSY - ENV REG
55375	BEARING ASSY STUD
55378	BEARING ASSY
55408	PLATE ASSY - INSERTER FLOOR
55712	PUSHER FINGER LH
55719	FINGER ASSY - RH PUSHER
55727	PUSHER FINGER RH W/ROLLERS
55910	BRIDGE ASSY SHORT
55911	BRIDGE ASSY LONG
56023	HANGER ASSY - SUCKER BAR
56308	SPROCKET IDLER
56360	CLUTCH ASSY
56536	BRUSH ASSY - MOISTENER
56547	ROLLER ASSY
59381	SPROCKET ASSY IDLER
59416	CARD ASSY INTERRUPTER
59490	CARD ASSY DETECTOR
68764	PHOTOCELL
502248	BELT TIMING 3/8 P128T

502359	SLIDE - INS FINGER
502453	VALVE NEEDLE
503095	COUPLING
503333	BELT TIMING 230XL037
504365	INDICATOR
504372	SUPPRESOR
504621	PHOTOCELL
507184	RELAY 24VAC
507222	SWITCH - PB SPDT
507225	CAP - PADDLE SWITCH JOG
507226	CAP - GREEN
507227	CAP - RED
507228	CAP - PADDLE SWITCH RUN
507295	INDICATOR - LIGHT RED
507410	PADDLE SWITCH
507631	SOLENOID VALVE 24VDC
514241	SPRINGS
514633	ARM HOLD DOWN STRIP
515044	LEVER CAM ROLLER
515044	LEVER CAM ROLLER
515045	PIN CAM ROLLER
515061	SEGMENT ENV HOPPER
515097	KNOB
515107	GUIDE SPRING
516460	CONV. CONTROL BOARD
518715	PIN, RECIPROCATING DRIVE
518716	ROLLER RECIPROCATING SLIDE
518946	FINGER DEFLECTOR
518986	GUIDE - ENVELOPE
523960	PIN RATCHET PAWL
530033	PLATE OPTICAL SWITCH
530181	SPRING COMPRESSION
530250	ROLLER - CAM
530253	ROLLER - CAM FOLLOWER
530330	SLEEVE BEARING
530619	FILTER ELEMENT
530666	PUMP GAST MOD 1550
530669	JAR
530691	FILTER ASSY
532020	BEARING BED PLATE BRACKET
532030	NUT ADJUSTMENT SCREW
532081	SCREW FRONT TABLE ADJUSTMENT
533542	BRAKE SHOE ASSY
533740	BRAKE DRUM 3/4
533741	BRAKE DRUM 5/8
534110	KEY DRIVE SHAFT
534117	KEY STOCK
534120	BEVEL GEAR
534130	BRACKET SHAFT IDLER
534158	ANCHOR - SHUTTLE
535010	COUNTER - MANUAL
536160	SPRING - EXTENSION
536200	POINTER V BLOCK
536604	KNOB ADJUST
536610	JAW GRIPPER
536611	ARM GRIPPER

536613	PIN
536621	LOWER SPRING CONTACT
536644	CLAMP LEVER
536646	CONTACT SPRING
536647	CONTACT SPRING
536658	PLATE SPRING
536660	KNOB ADJ
538127	RELAY - CRADLE TYPE 6PDT 24V
538128	SOCKET - RELAY
538751	SWITCH START
538752	SWITCH - JOG & RESET DPDT
538761	PULLEY VAR SPEED 3/4
538764	BLADE
538765	SCREW ASSY.
538768	BRACKET
538769	SWITCH EMERGENCY STOP
538830	BULB 7.5V
538831	BULB - #328 6V
538851	INDICATOR - LIGHT RED
540271	GRIPPER JAW SPRING HIGH TENSION
541091	TINERMAN PUSHER
541094	INSERT HEADER
541106	GATE - SHUTTLE
541153	GUIDE - ENV HOPPER
541311	GUIDE
541312	GUIDE HOPPER LH
541315	GUIDE MATERIAL
541321	LIFTER- PILE
541325	ANGLE MOUNT
541333	LEDGE
541335	KNIFE THROAT
541820	PLASTIC HOSE 1/8
542070	SPRING - EXTENSION
542071	SPRING
542110	LINK - PUSHER CHAIN
542380	PIN OPENER
543071	PIN - PIVOT
544030	SPRING - TORSION
545015	FINGER - ENV ENTERING
545053	HOLDER - ENT FINGER
545060	PIN SPRING
545251	HOLDER ENTERING A297
545252	FINGER ENTERING A297
545260	ARM ENTERING FINGER
545261	HOLDER ENTERING FINGER
545262	FINGER - ENTERING
545262	FINGER ENTERING
546072	SHAFT CAM
546231	PIN
546470	PIN
546540	LEVER SUCKER
546570	PIN
546664	CONTACT SPRING
546665	BLOCK - INSULATING
547023	PLATE - FLAP BREAKER
547552	ARM OPENER

548120	PIN - SPRING
548135	CAM - FLAP HOLDER
550052	LEVER - CAM FOLLWER
550055	STUD - LEVER ARM
550142	BAR - LOWER SUCKER
550217	SPRING
550223	STUD ADJUSTING
550229	CAM - UPPER SUCKER
550238	ROD YOKE
550242	STUD FOR TINNERMAN
550243	FASTENER
550256	LOWER CLAMP
550257	UPPER CLAMP
550283	SUCKER TUBE JUMBO
550285	ROD - CONNECTING
553642	FINGER JAW OPENER RH
553710	SHAFT CAM
554070	SCREW INSERT
554073	SCREW - INSERTER SEPARATOR
554075	SCREW - ENV SEPARATOR
554076	SPRING - COMPRESSION
554093	SLIDE FEED PLATE
554094	SPACER
554133	KNOB LOCK
554218	ENCL. ADJ. STUD
555014	ROD LOWER
555016	PIN- CROSSHEAD
555018	SIDE - LOCKING
555046	JAW - INSERT GRIPPER
555060	SPRING-GRIPPER JAW
555130	LEVER GRIPPER
555140	ROD GRIPPER
555141	CLIP
556067	SPRING - HOLDDOWN
556078	STRIP HOLD DOWN
556081	CLAMP SPRINGS
556082	SPRING INSERT
556093	STRIP HOLD DOWN
556106	BRUSH - HOLDDOWN
556106	BRUSH - INSERT
556204	ARM - HOLDDOWN
556214	SHAFT - HOLDDOWN CLAMP
557045	CLAMP
557047	SPRING
557091	PUSHER FINGER GREEN 0021370
557104	RH PUSHER FINGER ARM
557106	PUSHER TIP
557107	ARM PUSHER FINGER LH
557108	PUSHER FINGER GREEN ASSY RH
557110	FINGER PUSHER LH
557113	LH PUSHER FINGER ARM
557114	PUSHER TIP
557116	SCREW
557119	ARM PUSHER FINGER RH
557123	PUSHER FINGER STUD
557125	PIN - ROLLER

557126	ROLLER - PUSHER FINGER
557127	WASHER
557128	ADAPTER PUSH FINGER
557130	SCREW LOCATOR
557131	SCREW PIVOT
557173	GUIDE
557174	GUIDE - PUSHER FINGER
557258	SPRING SILENCER
557811	HOLDER PUSHER FINGER
557831	FINGER - PUSHER
557841	SHAFT OPERATING
557846	SHAFT PUSHER FINGER
558049	LINK - PUSHER CONNECTOR
559165	STOP - FRONT ANGLE
559710	ARM - INS SEPARATOR CLAMP
559720	FOOT - INSERT SEPARATOR
559722	FOOT - INSERTER SEPARATOR
560013	CLAMP - SUCKER HOLDER
560015	YOKE PIVOT
560016	WASHER - CUP HOLDER
560017	NUT - LEVER
560018	SCREW - CUP ADJUST
560019	SPRING - ADJUST
560100	SPRING SUCKER BAR
560115	ROD - SUCKER BAR TIE
560116	CLAMP
560170	CLAMP
561126	SPACER
561127	BLOCK
561128	BRUSH HOLDOWN
561129	ROD
563118	SHEAVE V-BELT
563180	SPRING - EXTENSION
565062	NIPPLE - VALVE
565080	VALVE-WATER SUPPLY
565203	WATER CONTROL SOLENOID
565472	GIB
565473	STUD
565476	SPRING SLIDE TENSION
566021	PLATE - STACKER
567120	SPRING EXT.
567260	PIN
567660	PIN LINK
570040	PIN
591870	PIN IDLER
593310	PIN IDLER
594645	LIP - CAROUSEL LH
594677	SHAFT
594688	PLATE CONV
594699	SHAFT
594699	SHAFT STROKE STOP
594709	GUIDE - ENV FLAP
594758	SOCKET
594760	GATING
594768	HOLDER
594768	HOLDER PHOTOCCELL

594768	SOCKET HOLDER
594872	JAW GRIPPER
595758	SOCKET PHOTOCELL
596577	BEARING - SEP SHAFT
597013	BUSHING
597106	COLLAR
597107	COLLAR
597157	BULB 28V
597321	E RING
597322	RING
597341	RING
597341	RING CLIP
597360	BEARING .250 X .375 X .312
597471	MICROSWITCH LEVER ROLLER
597555	WASHER -SPRING
597626	VALVE
597736	TIMING BELT
597791	SPRING COMP.
597791	SPRING COMPRESSION
597816	SPRING - COMP
597908	VALVE SOLENOID 24 VAC 6.5W
599011	SPROCKET DRIVE
5397312	NUT SPLIT
7006464	BRAKE VALVE SOLENOID 24V
7008726	JAW - GRIPPER ASSY
7009221	JAW OPENER
7009221	ROD JAW OPENER
	FLAP SHOE
0002204-008	STRIP HOLDOWN
0002204-013	STRIP HOLD DOWN 8"
0002204-014	STRIP HOLD DOWN 13"
557092A	PUSHER FINGER GREEN 0021370 RH
9900000-043	6-32x3/8 FLAT HD SCREW
9900003-001	#2 SCREWS
9900014-005	#6 WASHER
9900016-005	6-32 NUT
E4961186	GUIDE CAM LOCK
E4961187	LOCK CAM
TP 50032	PARTS CATALOG MASTERMAILER 3
TP 50077	PARTS CATALOG EI 1000
TP 50186	PARTS CATALOG MASTERMAILER 3
TP 50220	PARTS CATALOG EXPEDITOR
54161	HEADER ASSY
507184	RELAY-CRADLE R10-E1-X2 24VDC
546726	ENV GUIDE HOLDOWN
557147	SHAFT PUSHER FINGER LH
538127	RELAY-CRADLE R10-E1-X6 24VAC
536622	CONTACT
536620	CLAMP LEVER
554120	GUIDE LH
554127	GUIDE RH
541321	LIFTER
550030	CONNECTOR HOSE
538079	TRANSFORMER DUAL VOLTAGE 4/26V
50978	CARD ASSY - MACH CONTROL
594607	ARM JAW HOLDER

594879	SPRING EXT.
507221	LAMP 28V WEDGE BASE
505702	SWITCH E STOP
7002858	BLOCK CONTACT